



RTS REPEATER



The Somfy RTS Repeater can be used in installations to extend the range of the standard Radio Technology Somfy signal. It will receive the signal from a Telis or similar device and retransmit the signal to a RTS compatible motor or receiver.

Simply plug the receiver into any 120v AC outlet. It should be located at least halfway between the transmitting device (Telis) and receiving device (RTS Motor). The red LED will blink, indicating communication.

Part Number: 1810791

SOMFY CANADA

6315 Shawson Drive, Unit #1
Mississauga, Ontario L5T1J2

SOMFY SYSTEMS, INC.

47 Commerce Drive
Cranbury, NJ 08512

SOMFY MEXICO S.A. De C.V.

Termazcal 19-b, La Loma
Tlalnepantla
Edo. de Mex 54130
Mexico

SOMFY SYSTEMS, INC. reserves the right to change, update or improve this document without prior notice.

Ref. No.: 2500791

© SOMFY SYSTEMS, INC. 06/07



RTS REPEATER



The Somfy RTS Repeater can be used in installations to extend the range of the standard Radio Technology Somfy signal. It will receive the signal from a Telis or similar device and retransmit the signal to a RTS compatible motor or receiver.

Simply plug the receiver into any 120v AC outlet. It should be located at least halfway between the transmitting device (Telis) and receiving device (RTS Motor). The red LED will blink, indicating communication.

Part Number: 1810791

SOMFY CANADA

6315 Shawson Drive, Unit #1
Mississauga, Ontario L5T1J2

SOMFY SYSTEMS, INC.

47 Commerce Drive
Cranbury, NJ 08512

SOMFY MEXICO S.A. De C.V.

Termazcal 19-b, La Loma
Tlalnepantla
Edo. de Mex 54130
Mexico

SOMFY SYSTEMS, INC. reserves the right to change, update or improve this document without prior notice.

Ref. No.: 2500791

© SOMFY SYSTEMS, INC. 06/07